

TECHNICAL INSTRUCTION

FIRMWARE UPGRADE AIS & SENSOR BOARDS

CONTENTS

Transceiver: 080200.04.15.02

Sensor: 080400.02.17.00

proAtoN: 080500.02.04.00

vxSend V1.3

INSTALLATION INSTRUCTIONS

Requirements


- Windows PC
- USB cable
- AIS software zip file (including vxSend V1.3 and image files)
- AIS AtoN

Software update

1. Extract the software to your local machine.
2. Connect the USB cable.
3. Run vxSend V1.3.
4. Select the relevant COM port (note that the Transceiver and Sensor boards will be assigned separate COM ports)



5. Use the '...' button to select the required image file.

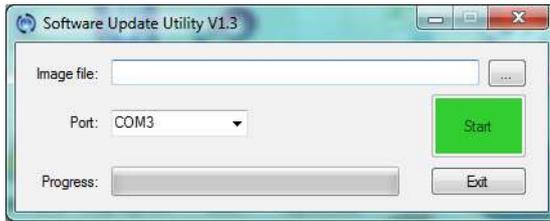

6. Press the green Start button. The progress bar will show the progress of the update.

7. When it has finished a dialogue box will display 'Software update complete'.

8. Cycle the power for the software update to take effect.

9. You can check the software has updated using the Diagnostics tab of proAtoN.

During the update do not:

- Close down the updater application
- Disconnect the USB cable

If power/communications are interrupted the software may become corrupted.

If this occurs, please repeat the update process in the first instance; depending on the state it is in this may recover the software.



Mediterráneo Señales Marítimas, S.L. / +34 96 276 10 22 / msm@mesemar.com / www.mesemar.com